


Instructions ECODESIGN

Instructions ECODESIGN

Manuale uso e manutenzione - *Original*
Use and maintenance manual

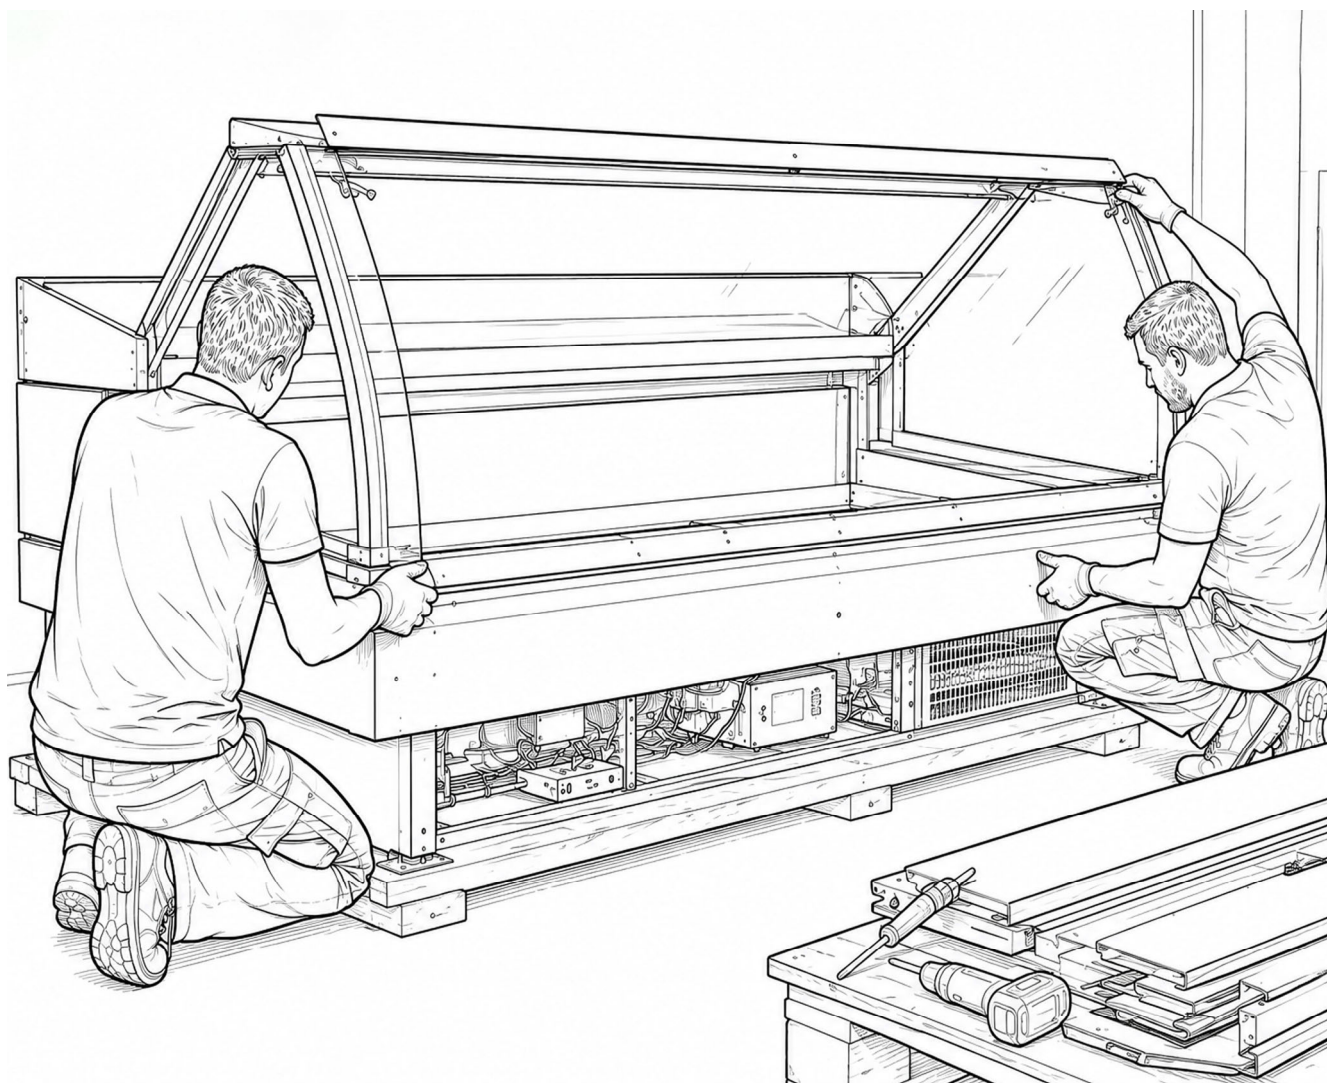

YOUR GLOBAL PARTNER FOR RETAIL SOLUTIONS

IMPORTANT: Carefully read before use. Keep in store for future use.



1. Safety labels.....	2
2. Personal protective equipment.....	2
3. Necessary tools.....	2
4. Disassembling/assembling the siphon	2
5. Disassembling/assembling the shelves and the brackets	3
6. Disassembling/assembling the seal LT Models	4
7. Disassembling/assembling the trays	4
8. Disassembling/assembling the front glass pane-ISLANDS	5
9. Disassembling/assembling the sliding glass panes	6
10. Disassembling/assembling the roof lamp	7
11. Disassembling/assembling the adjustable roof lamp	8
12. Disassembling/assembling the shelf lamp	9
13. Disassembling/assembling the rear sliding doors	10

1. Safety labels

Labels indicating the hazards and precautions for operators and technicians:

	risk of live voltage and electrocution		danger of moving parts (fans)		flammable gas		hot surfaces (if present)
	equipotentiality		high pressure system		exact position for the insertion of the brackets of the forklift		

2. Personal protective equipment

Symbols for mandatory Personal Protective Equipment (PPE) for refrigeration technicians authorised to work on the appliance:

	safety goggles		safety footwear		safety helmet
	safety gloves		clothing, overall		ear protection

3. Necessary tools





Necessary tools


hex keys (Allen keys); PH, PZ and flathead screwdrivers;

4. Disassembling/assembling the siphon



Remove the power supply
Remove the goods

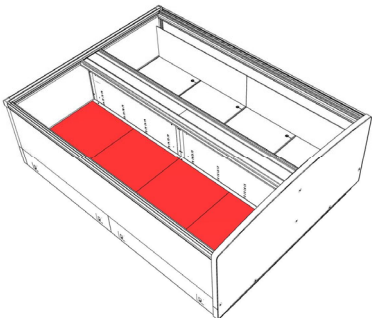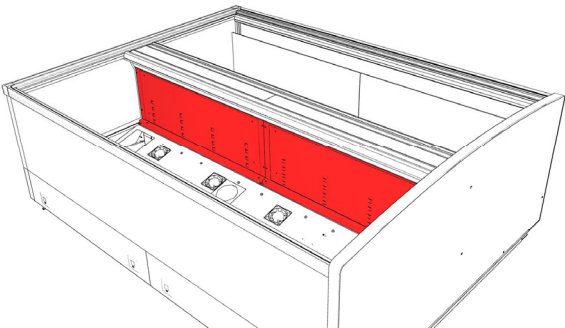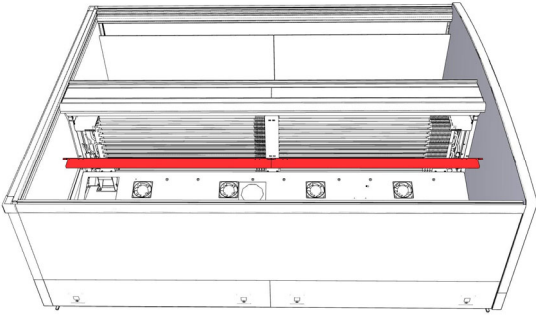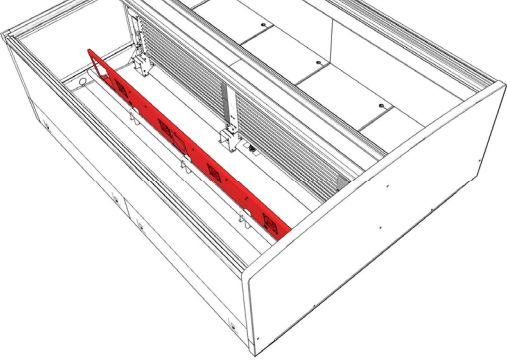1 - Remove the trays	2 - Remove the screws and back panels
	
3 - Remove the brackets	4 - Rotate the fan plate
	
5 - Remove the filter	6 - Remove the drain

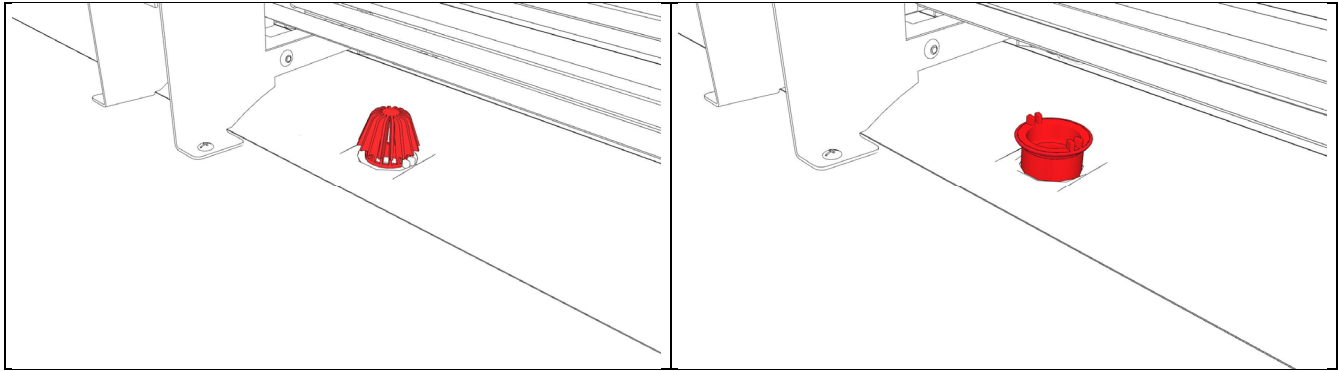

Upon completion of maintenance/cleaning operations, reassemble the parts following the procedure in reverse order.

Upon completion of assembly, restore the electrical power supply


5. Disassembling/assembling the shelves and the brackets




Remove the power supply

Remove the goods

1 - Insert the shelf into the slots

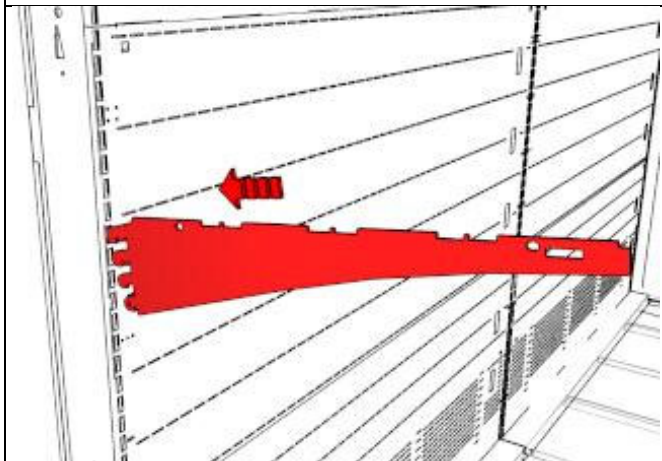


2 - Rotate the shelf to the desired angle

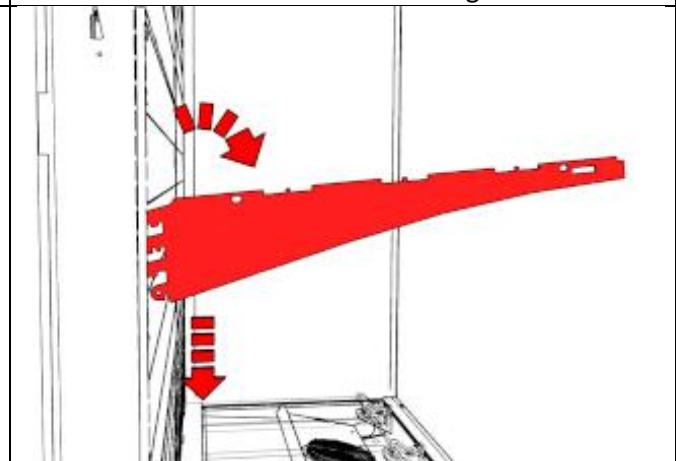

3 - Insert the other bracket



4 - Position the shelf

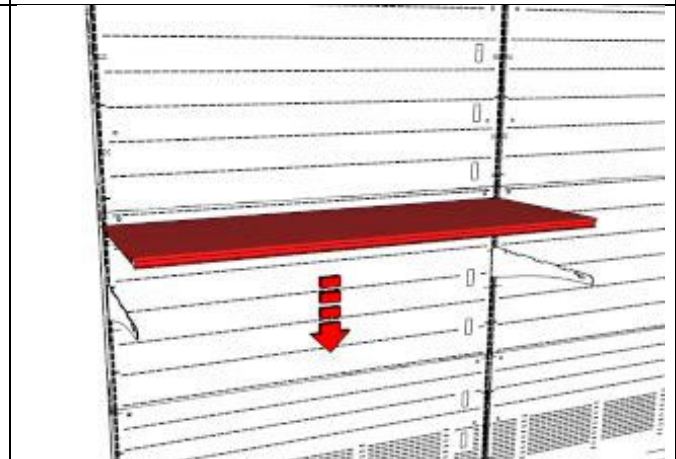

CHECK THAT THE BRACKETS ARE PERFECTLY INSERTED INTO THE SLOTS IN THE UPRIGHT; THEY MUST NOT MOVE. MAKE SURE THE SHELF FITS PERFECTLY IN THE BRACKETS.




Upon completion of assembly, restore the electrical power supply

6. Disassembling/assembling the seal | LT Models



Remove the power supply
Remove the goods

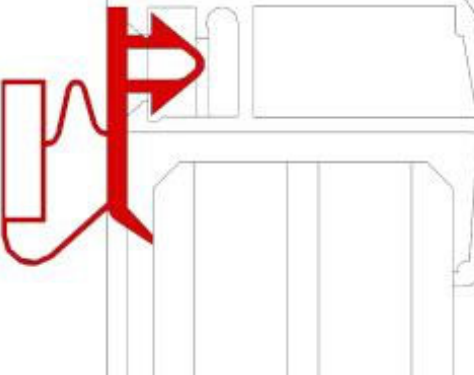1 - Open the door	2 - Remove the seal and replace it with the new one
	
3 - Insert the seal as shown in the figure	4 - Close the door
	




Upon completion of assembly, restore the electrical power supply

7. Disassembling/assembling the trays



Remove the power supply
Remove the goods

1 - Remove the shelves	2 - Remove the air intake grilles
------------------------	-----------------------------------

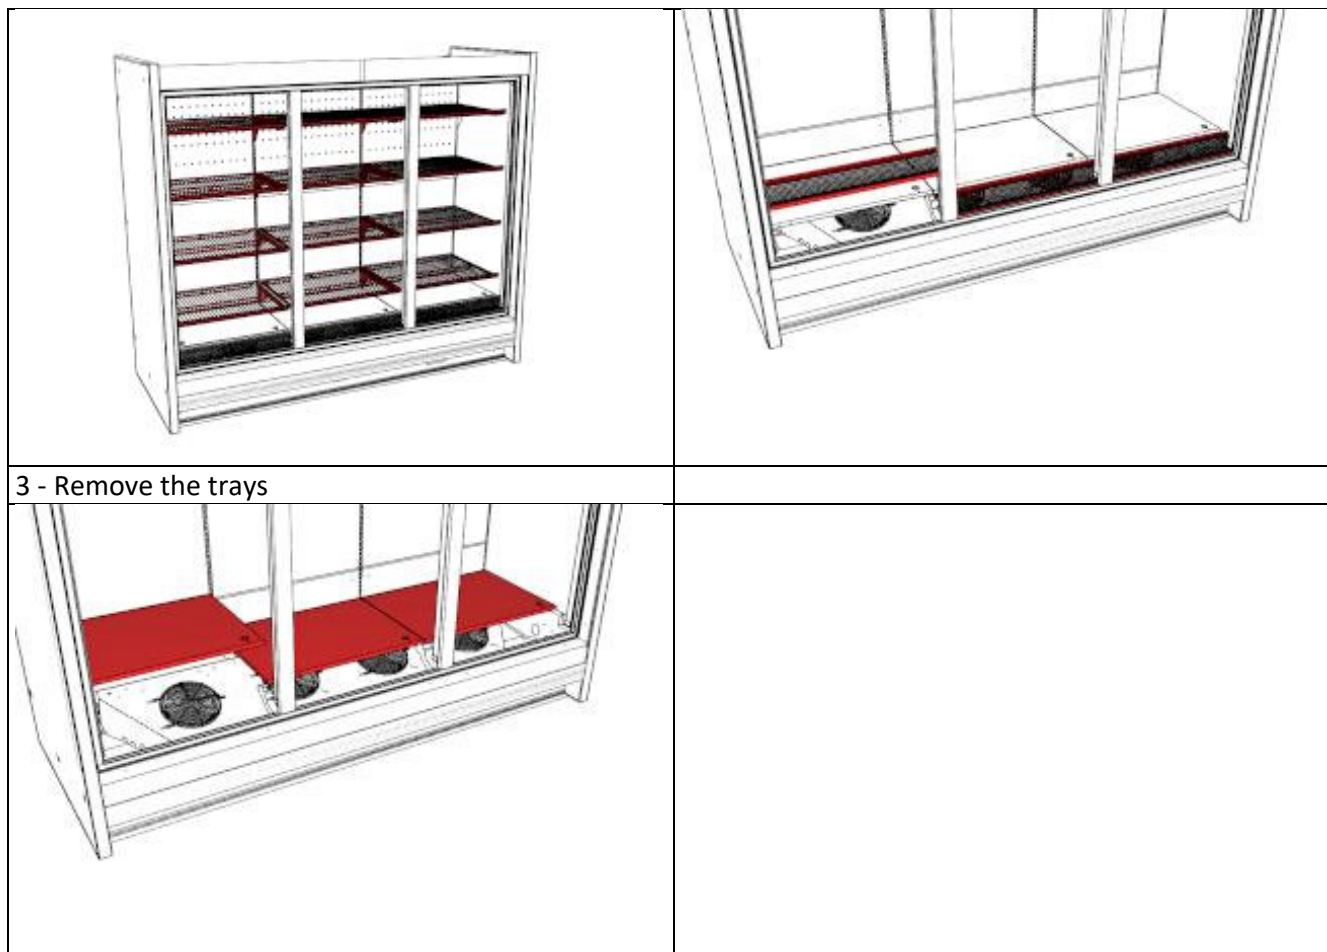



Upon completion of assembly, restore the electrical power supply

8. Disassembling/assembling the front glass pane-ISLANDS




Remove the power supply
Remove the goods

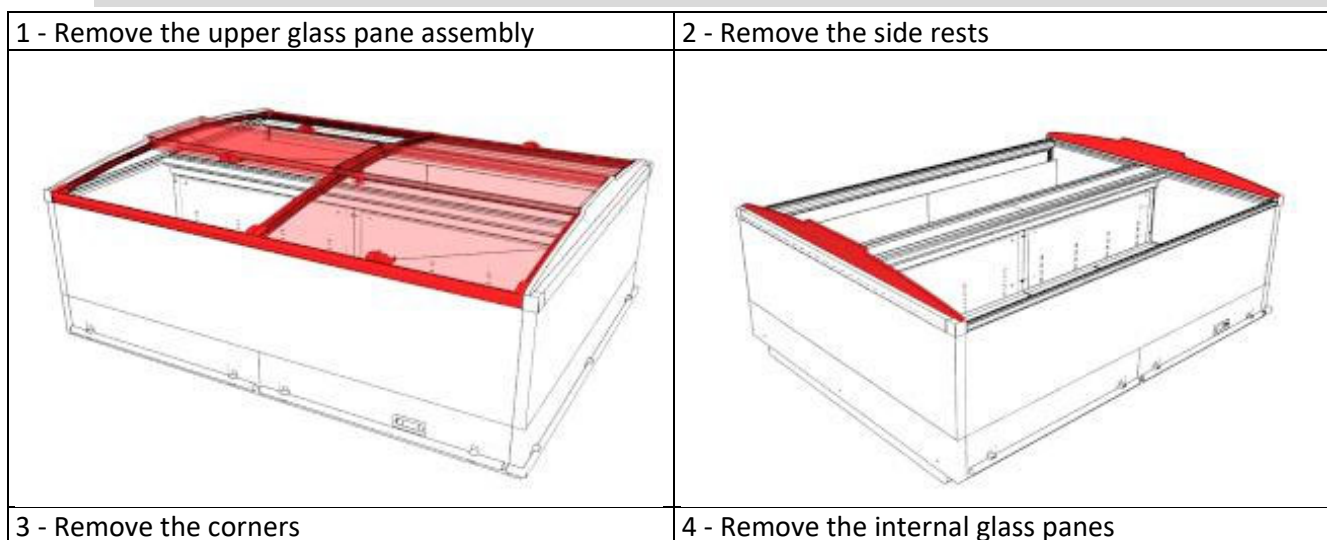


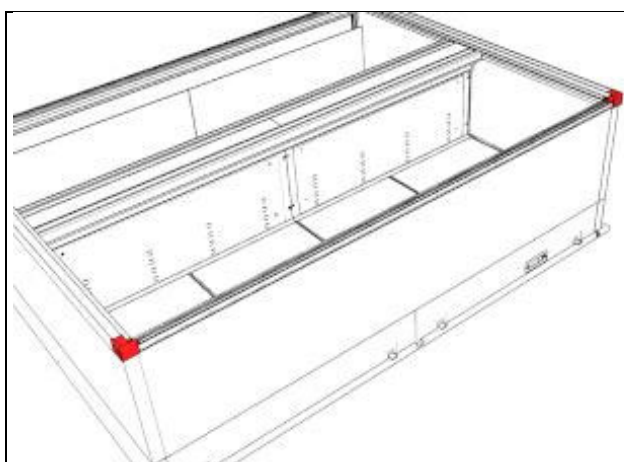


5 - Remove the internal profile

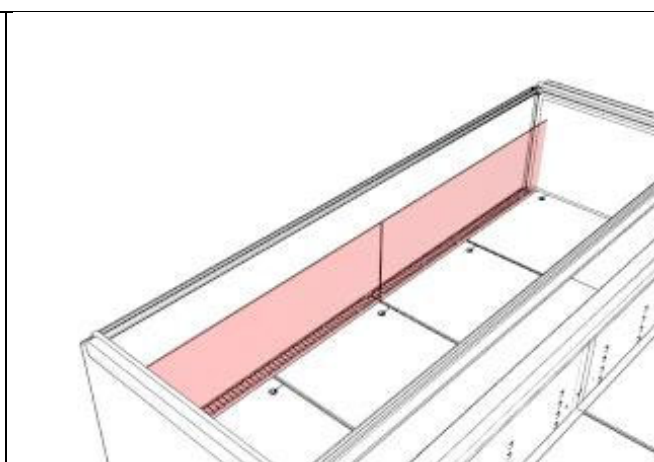



6 - Remove the screws

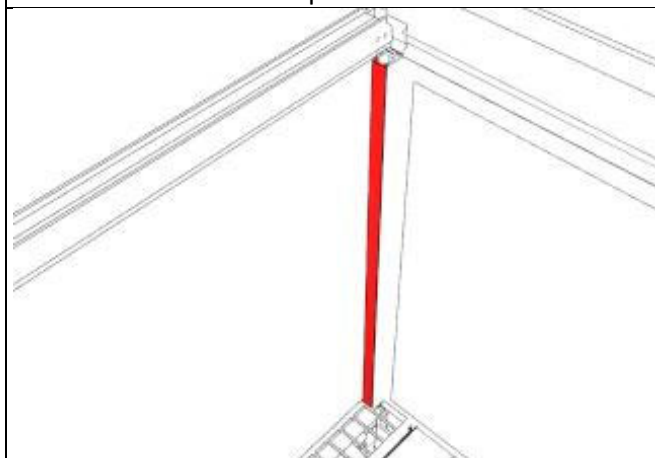

7 - Repeat these operations for the other side

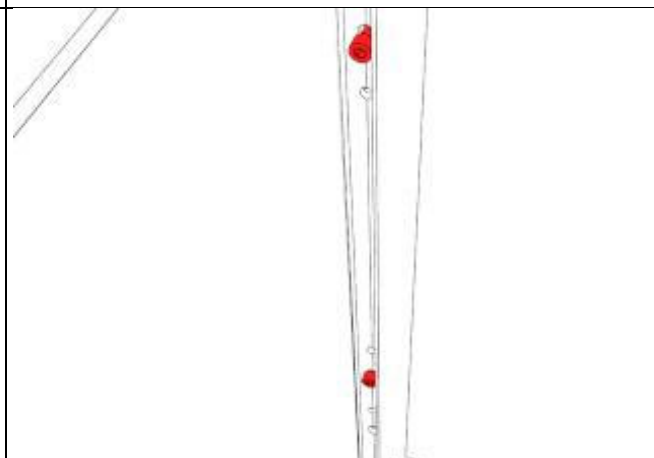

8 - Remove the front glass pane

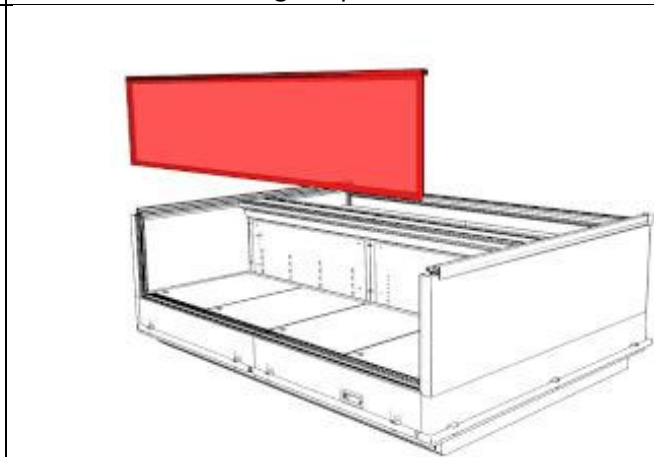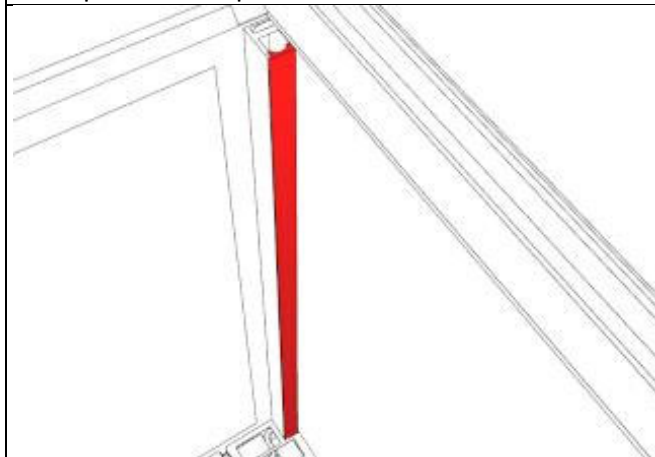

Upon completion of maintenance/cleaning operations, reassemble the parts following the procedure in reverse order.


9. Disassembling/assembling the sliding glass panes



Remove the power supply

1 - Remove the screws and the glass


2 - Remove the sliding glass

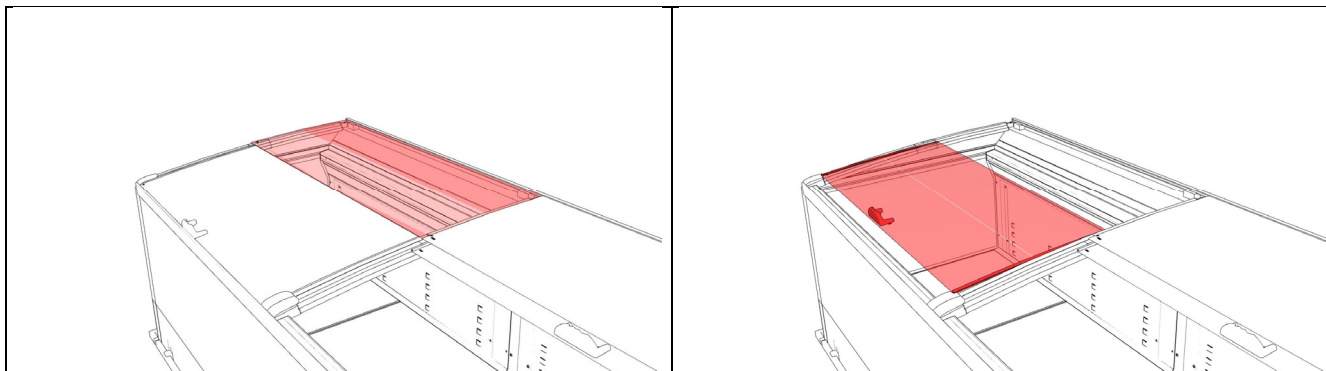


Upon completion of maintenance/cleaning operations, reassemble the parts following the procedure in reverse order.


10. Disassembling/assembling the roof lamp

Locate the lamp mountings

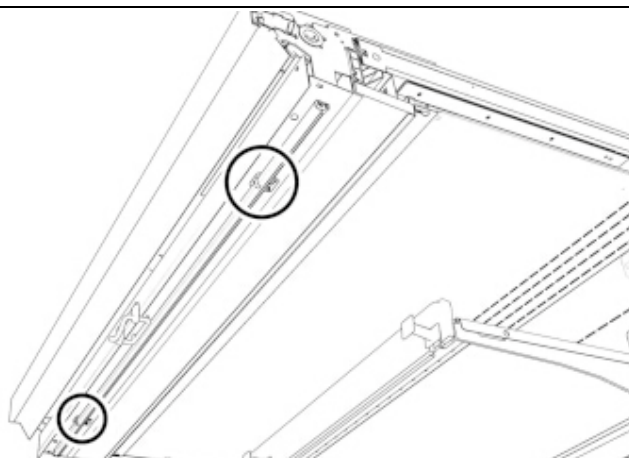

Force the lamp mounting outwards

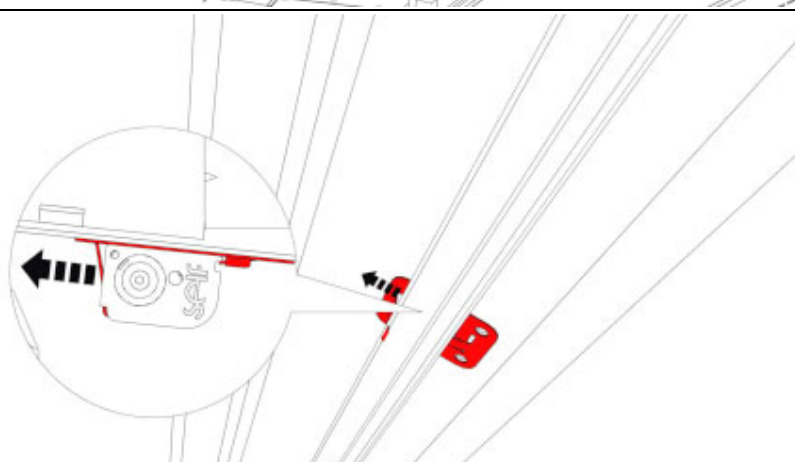

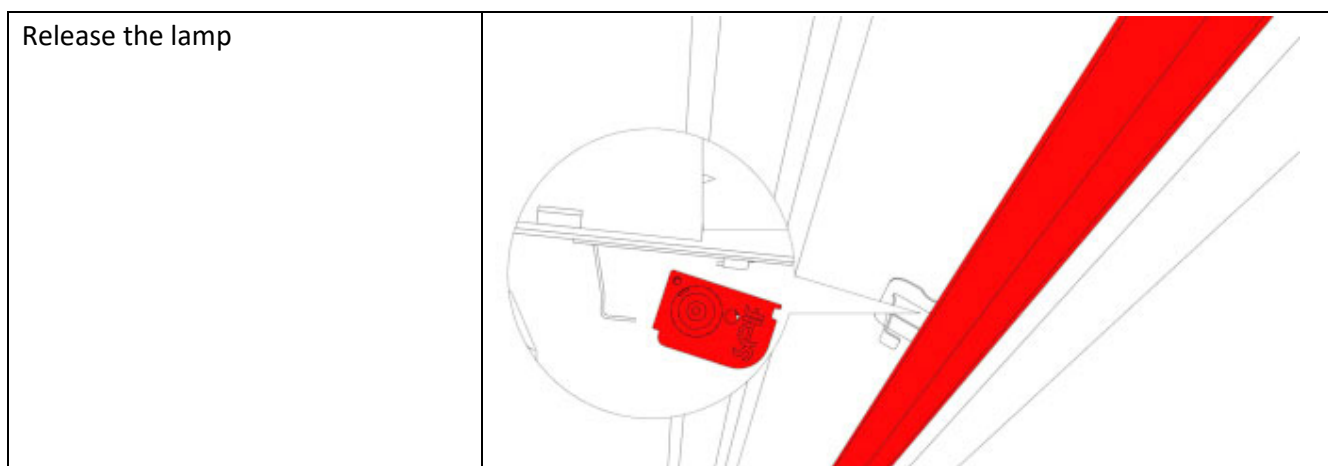




11. Disassembling/assembling the adjustable roof lamp





12. Disassembling/assembling the shelf lamp


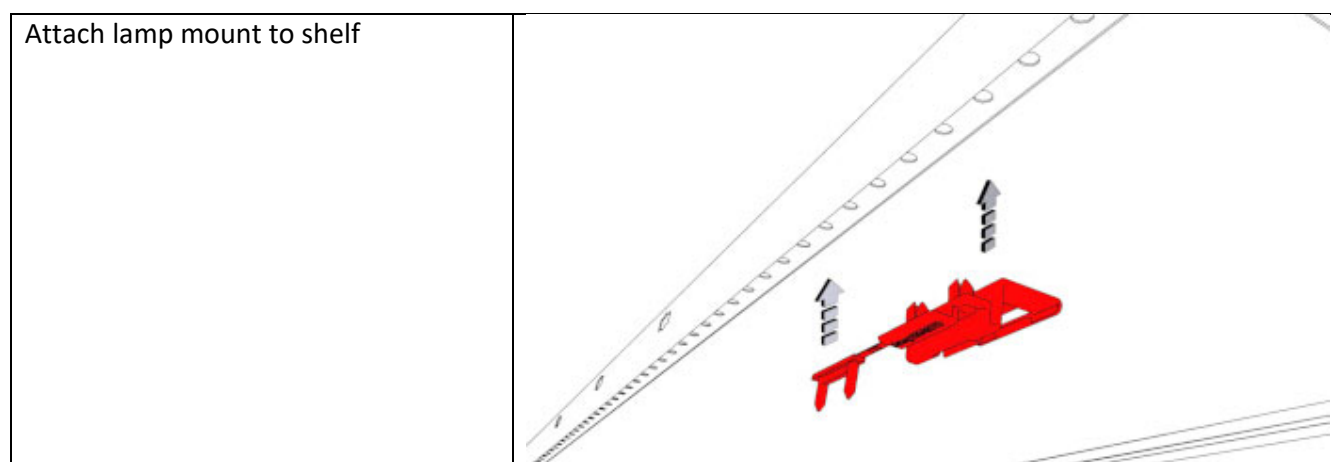


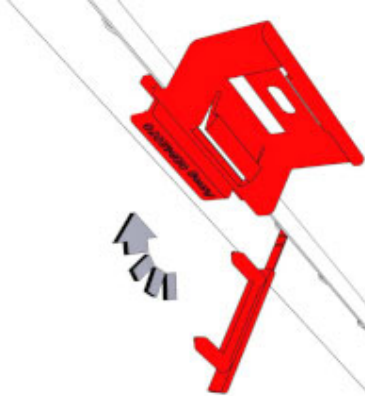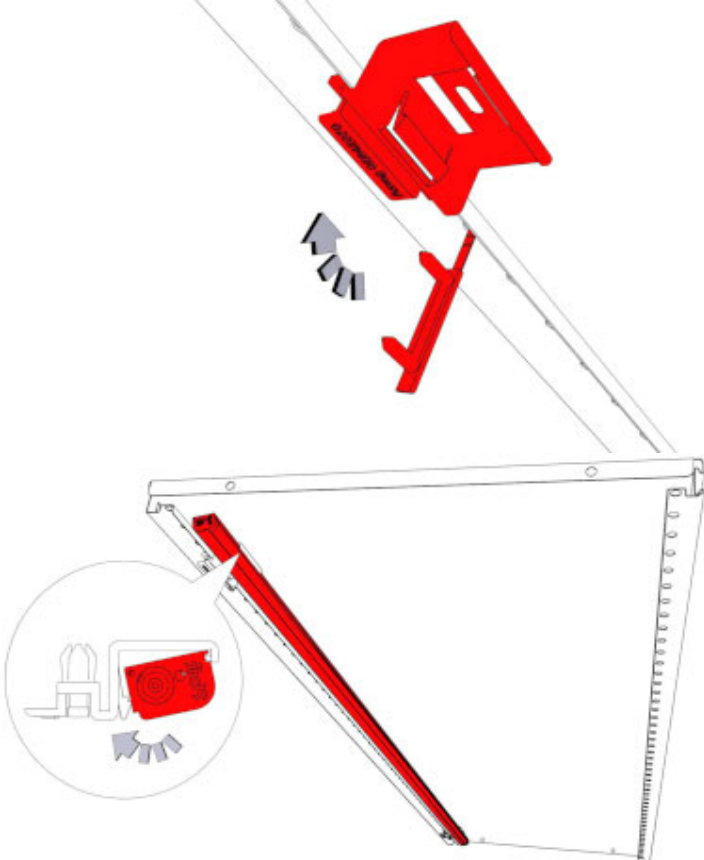
Secure the lamp mount in the shelf by inserting the plugs as shown	
Insert lamp	

13. Disassembling/assembling the rear sliding doors



Togliere l'alimentazione elettrica
Togliere la merce

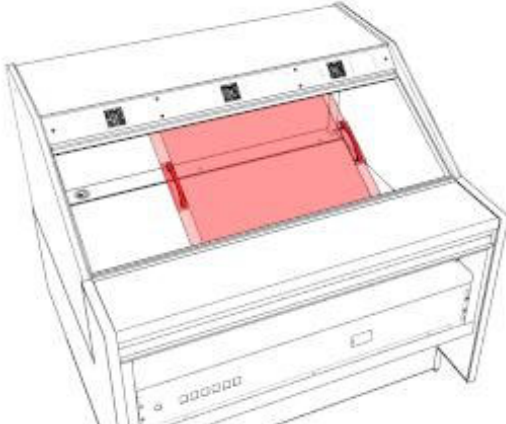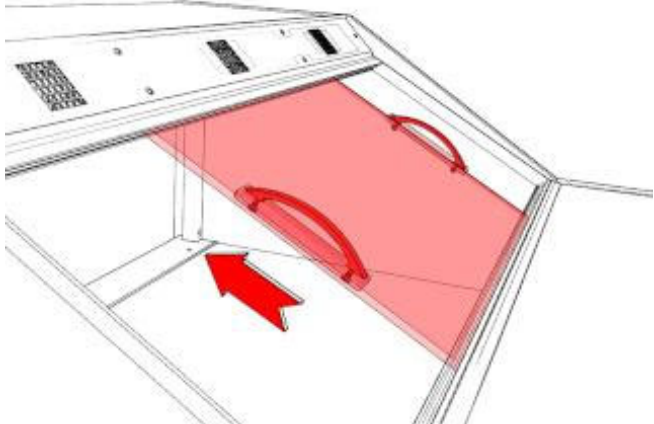1 - Aprire le chiusure scorrevoli 	2 - Muovere le chiusure scorrevoli 
3 - Ruotare le chiusure scorrevoli	4 - Togliere i vetri scorrevoli

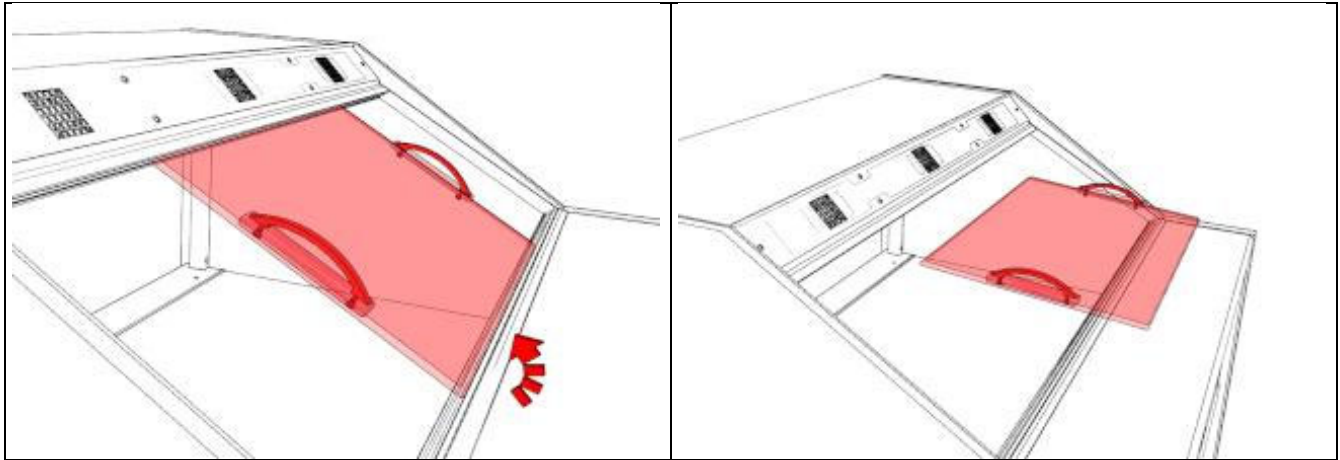

Al termine delle operazioni di manutenzione/pulizia rimontare le parti seguendo la procedura al contrario.



arneg

ARNEG S.p.A.
35010 Campo san Martino (PD) Italy - Tel. +39 049 9699333 - www.arneg.it

05060258 01 06-2026